

Test Report

FOR: **Focal Point**
Chicago, IL

Sound Absorption
RAL-A18-420

CONDUCTED: 2018-12-05

Page 1 of 9

ON: Seem 1 Acoustic, 16 in. tall, 18 in. apart

TEST METHOD

Riverbank Acoustical Laboratories™ is accredited by the U.S. Department of Commerce, National Institute of Standards and Technology (NIST) under the National Voluntary Laboratory Accreditation Program (NVLAP) as an ISO 17025:2005 Laboratory (NVLAP Lab Code: 100227-0) and for this test procedure. The test reported in this document conformed explicitly with ASTM C423-17: "Standard Test Method for Sound Absorption and Sound Absorption Coefficients by the Reverberation Room Method." The specimen mounting was performed according to ASTM E795-16: "Standard Practices for Mounting Test Specimens During Sound Absorption Tests." A description of the measuring procedure and room qualifications is available upon request.

DESCRIPTION OF THE SPECIMEN

The test specimen was designated by the manufacturer as Seem 1 Acoustic, 16 in. tall, 18 in. apart. A full internal inspection performed on the test specimen by Riverbank personnel verified the manufacturer's description.

Test Specimen

Trade Name: Seem 1 Acoustic
Materials: Polyethylene terephthalate felt, steel, acrylic
Overall Dimensions: 5 @ 2460.62 mm (96.875 in.) x 406.4 mm (16 in.)
Overall Thickness: 57.15 mm (2.25 in.)
Construction: 9 mm (0.354 in.) thick felt panels on sides of steel frame
Steel tray at top face, acrylic lens at bottom face
Core material information withheld per customer request
Overall Weight: 39.92 kg (88 lbs)

Physical Measures (per unit)

Dimensions: 2.46 m (96.875 in) wide by 0.41 m (16.0 in) long
Thickness: 0.06 m (2.25 in)
Weight: 7.98 kg (17.6 lbs)

Test Report

Focal Point
2018-12-05

RAL-A18-420
Page 2 of 9

Test Environment

Room Volume: 291.98 m³
Temperature: 20.3 °C ± 0.0 °C
Relative Humidity: 61.35 % ± 0.1 %
Barometric Pressure: 99.3 kPa

Each sound absorbing unit had an absorptive area (all exposed surfaces) of 2.33 m² (25.05 ft²). The total absorptive area (all exposed surfaces) of all sound-absorbing units was 11.64 m² (125.27 ft²). The array of units covered 5.22 m² (56.17 ft²) of chamber floor surface (total treated area).

MOUNTING METHOD

Type J Mounting: The specimen is an array of spaced sound absorbing units suspended from an array of cables such that the bottom surface of the units is located approximately 1016 mm (40 in.) above the horizontal test surface. This approximates the mounting method of a typical ceiling baffle installation. The units were evenly distributed in a single row, spaced 457.2 mm (18 in.) apart.

Test Report

Focal Point
2018-12-05

RAL-A18-420
Page 3 of 9



Figure 1 - Specimen mounted in test chamber

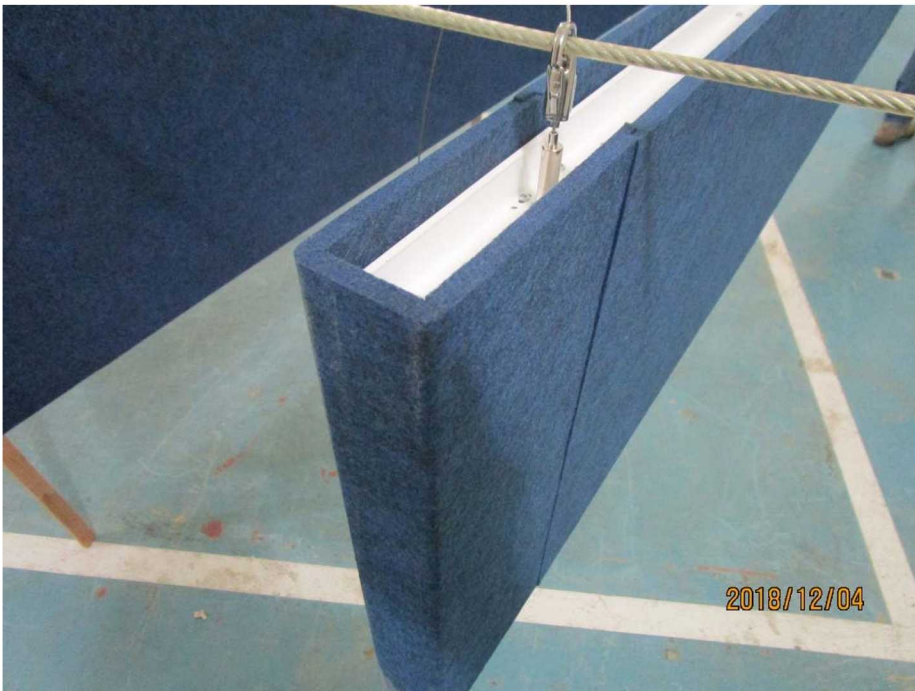


Figure 2 - Detail of individual baffle

Test Report

Focal Point
2018-12-05

RAL-A18-420
Page 4 of 9


TEST RESULTS


Note: There is currently no standardized method for calculating Absorption Coefficients from spaced object absorbers. The sound absorption performance of spaced object absorbers should not be compared directly with specimens tested as a single rectangular area (e.g. mounting types A, E, etc.).

1/3 Octave Center Frequency (Hz)	Total Absorption		Absorption per Unit	
	(m ²)	(Sabins)	(m ² / Unit)	(Sabins / Unit)
100	1.15	12.35	0.23	2.47
** 125	1.27	13.67	0.25	2.73
160	1.54	16.59	0.31	3.32
200	2.27	24.41	0.45	4.88
** 250	2.79	29.98	0.56	6.00
315	3.70	39.78	0.74	7.96
400	3.79	40.78	0.76	8.16
** 500	4.56	49.06	0.91	9.81
630	5.14	55.36	1.03	11.07
800	5.93	63.83	1.19	12.77
** 1000	6.62	71.30	1.32	14.26
1250	7.37	79.35	1.47	15.87
1600	7.87	84.75	1.57	16.95
** 2000	8.23	88.58	1.65	17.72
2500	8.07	86.91	1.61	17.38
3150	8.18	88.05	1.64	17.61
** 4000	8.37	90.06	1.67	18.01
5000	8.49	91.37	1.70	18.27

Tested by 
Dean Victor
Senior Experimentalist

Report by 
Malcolm Kelly
Acoustical Test Engineer

Approved by 
Eric P. Wolfram
Laboratory Manager


Digitally signed by Eric P Wolfram
DN: cn=Eric P Wolfram, ou=Alion
Science & Technology, ou=Riverbank
Acoustical Laboratories,
email=ewolfram@alionscience.com,
c=US
Date: 2018.12.14 10:26:12 -0600


Test Report

Focal Point
2018-12-05

RAL-A18-420
Page 5 of 9

SOUND ABSORPTION REPORT

Seem I Acoustic, 16 in. tall, 18 in. apart

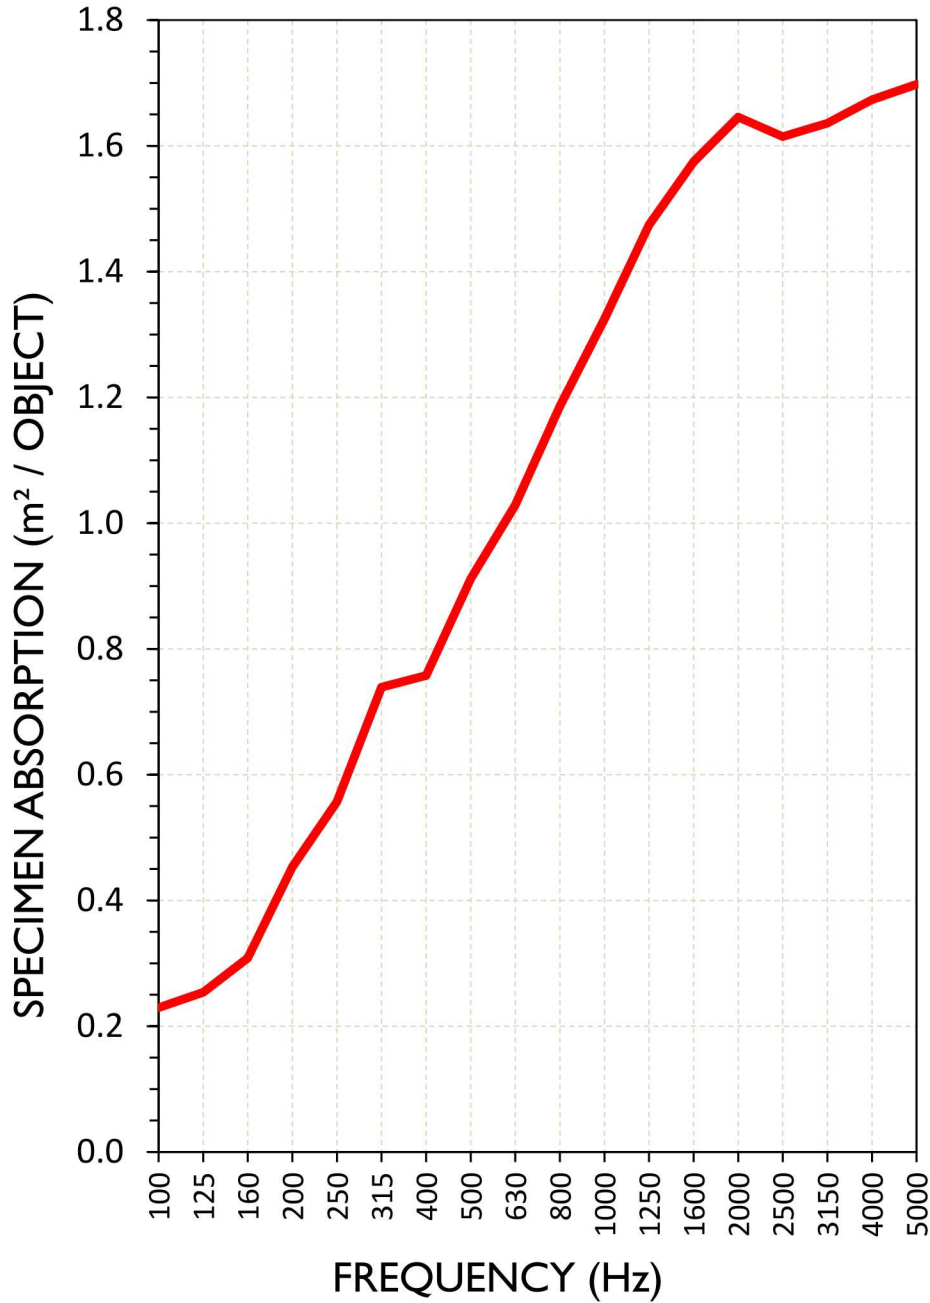

Test Report

Focal Point
2018-12-05

RAL-A18-420
Page 6 of 9

APPENDIX A: Extended Frequency Range Data

Specimen: Seem 1 Acoustic, 16 in. tall, 18 in. apart (See Full Report)

The following non-accredited data were obtained in accordance with ASTM C423-17, but extend beyond the defined frequency range of 100Hz to 5,000Hz. These unofficial results are representative of the RAL test environment only and intended for research & comparison purposes.

1/3 Octave Band Center Frequency (Hz)	Total Absorption		Absorption per Unit	
	(m ²)	(Sabins)	(m ² / Unit)	(Sabins / Unit)
31.5	-0.12	-1.31	-0.02	-0.26
40	0.99	10.64	0.20	2.13
50	-0.36	-3.92	-0.07	-0.78
63	0.65	7.03	0.13	1.41
80	0.77	8.33	0.15	1.67
100	1.15	12.35	0.23	2.47
125	1.27	13.67	0.25	2.73
160	1.54	16.59	0.31	3.32
200	2.27	24.41	0.45	4.88
250	2.79	29.98	0.56	6.00
315	3.70	39.78	0.74	7.96
400	3.79	40.78	0.76	8.16
500	4.56	49.06	0.91	9.81
630	5.14	55.36	1.03	11.07
800	5.93	63.83	1.19	12.77
1000	6.62	71.30	1.32	14.26
1250	7.37	79.35	1.47	15.87
1600	7.87	84.75	1.57	16.95
2000	8.23	88.58	1.65	17.72
2500	8.07	86.91	1.61	17.38
3150	8.18	88.05	1.64	17.61
4000	8.37	90.06	1.67	18.01
5000	8.49	91.37	1.70	18.27
6300	8.76	94.30	1.75	18.86
8000	8.75	94.20	1.75	18.84
10000	8.84	95.17	1.77	19.03
12500	9.09	97.88	1.82	19.58

1512 S BATAVIA AVENUE
GENEVA, IL 60134
630-232-0104

An ALION Technical Center

RIVERBANK.ALIONSCIENCE.COM

FOUNDED 1918 BY
WALLACE CLEMENT SABINE

Test Report

Focal Point
2018-12-05

RAL-A18-420
Page 7 of 9

APPENDIX B: Instruments of Traceability

Specimen: Seem 1 Acoustic, 16 in. tall, 18 in. apart (See Full Report)

<u>Description</u>	<u>Model</u>	<u>Serial Number</u>	<u>Date of Certification</u>	<u>Calibration Due</u>
System 1	Type 3160-A-4/2	System 1	2018-08-09	2019-08-09
Bruel & Kjaer Mic And Preamp A	Type 4943-B-001	2311428	2018-09-28	2019-09-28
Bruel & Kjaer Pistonphone	Type 4228	2781248	2018-08-06	2019-08-06
Omega Digital Temp., Humid. And Pressure Recorder	OM-CP-PRHTemp2000	P97844	2018-02-03	2019-02-03

END



NVLAP LAB CODE 100227-0

RIVERBANK ACOUSTICAL LABORATORIES IS ACCREDITED BY NVLAP (LAB CODE 100227-0) FOR ACOUSTICAL TESTING SERVICES IN ACCORDANCE WITH ISO/IEC 17025:2005 AND FOR THIS PROCEDURE. THIS REPORT MUST NOT BE USED BY THE CLIENT TO CLAIM PRODUCT CERTIFICATION, APPROVAL, OR ENDORSEMENT BY RAL, NVLAP, NIST, OR ANY AGENCY OF THE U.S. GOVERNMENT.

THIS REPORT SHALL NOT BE MODIFIED WITHOUT THE WRITTEN APPROVAL OF RAL. THE RESULTS REPORTED APPLY ONLY TO THE SPECIFIC SAMPLE SUBMITTED FOR TESTING; RAL ASSUMES NO RESPONSIBILITY FOR THE PERFORMANCE OF ANY OTHER SAMPLE.

FOR: **Focal Point**
Chicago, IL

Report Referenced: **RAL-A18-420**
Page 1 of 2

CONDUCTED: 2018-12-05

ON: Seem 1 Acoustic, 16 in. tall, 18 in. apart (See Full Test Report for Details)

Appendix C to ASTM C423 Sound Absorption Test

Non-standard calculation of equivalent NRC Rating and Absorption Coefficients from spaced absorbers.

At this time ASTM C423 does not provide a standard method for determining absorption coefficients of spaced object absorbers. Tests of a set of sound absorbing objects spaced apart from each other will yield higher absorption rates than a specimen joined together as a single patch (A-Mount or E-Mount). For this reason it is unfair to provide NRC or absorption coefficient ratings for specimens that consist of a spaced set of absorbers. Despite this, the architectural industry has expressed great demand for a simple "single number" rating for these treatments. Likewise, acoustical consultants desire equivalent absorption coefficient data for use in acoustical modeling programs. The following is an attempt to appease these demands until ASTM develops a standard method for calculation. Several alternate non-standard calculation methods are provided. Riverbank Acoustical Laboratories prefers method 1.

Method 1) Apparent Sound Absorption Coefficient calculated from total test surface area covered.

The total sound absorption yielded by the specimen is divided by the total surface area of the test surface covered by the suspended units, including intermediate spaces. The unit rigging covered 5.22 m² (56.17 ft²) of horizontal test surface area. With an extra 457.2 mm (18 in.) of width to account for the space between the tested array and what would be the next unit in a larger array, the surface area comes to 6.34 m² (68.28 ft²). Apparent Noise Reduction Coefficient (NRC) rating and Sound Absorption Average (SAA) figures are calculated from this data based on the methods described in ASTM C423-17. This may be the most accurate method for comparing unit arrays to ceiling tile products. The apparent sound absorption coefficient data can be assigned to a single horizontal surface or plane in acoustical modeling software for approximation of unit array performance. Such approximations rely on the assumptions that unit spacing is similar to that of the tested array and that the installation occurs over a perfectly reflective ceiling surface.

Method 2) Apparent Sound Absorption Coefficient calculated from total exposed surface area of specimen.

The total sound absorption yielded by the specimen is divided by the total surface area of all exposed specimen faces (2.33 m² (25.05 ft²) per unit x 5 units = 11.64 m² (125.27 ft²) total surface area). Apparent Noise Reduction Coefficient (NRC) rating and Sound Absorption Average (SAA) figures are calculated from this data based on the methods described in ASTM C423-17. This method shows the actual absorption occurring at the exposed surfaces, but does not provide a fair comparison with materials mounted as a uniform patch (in A-mount or E-mount).

Method 3) Apparent Sound Absorption Coefficient calculated from one face per unit.

The total sound absorption yielded by the specimen is divided by the surface area of one side of one large face for each unit in the specimen (1.0 m² (10.76 ft²) per unit x 5 units = 5.0 m² (53.82 ft²) total surface area). Apparent Noise Reduction Coefficient (NRC) rating and Sound Absorption Average (SAA) figures are calculated from this data based on the methods described in ASTM C423-17. This method is favored by some material manufacturers since it yields very high NRC figures, but does not provide a fair comparison with other ceiling tile or wall panel products. Riverbank Acoustical Laboratories recommends that results obtained from this method be used for research and comparison purposes only; such results should not be used for marketed claims of product performance.

FOR: **Focal Point**

Report Referenced: **RAL-A18-420**

CONDUCTED: 2018-12-05

Page 2 of 2

Appendix D: Data Note: See full test report for details of mounting position, spacing and configuration as these parameters greatly affect sound absorption performance.

Specimen Absorption			Method 1	Method 2	Method 3
			Apparent Abs. Coefficient From Total Coverage Area	Apparent Abs. Coefficient From Total Exposed Surface Area	Apparent Abs. Coefficient From One Face/Baffle
Freq. (Hz)	Sabins	Sabins / Unit			
31.5	-1.31	-0.26	-0.02	-0.01	-0.02
40	10.64	2.13	0.16	0.08	0.20
50	-3.92	-0.78	-0.06	-0.03	-0.07
63	7.03	1.41	0.10	0.06	0.13
80	8.33	1.67	0.12	0.07	0.15
100	12.35	2.47	0.18	0.10	0.23
125	13.67	2.73	0.20	0.11	0.25
160	16.59	3.32	0.24	0.13	0.31
200	24.41	4.88	0.36	0.19	0.45
250	29.98	6.00	0.44	0.24	0.56
315	39.78	7.96	0.58	0.32	0.74
400	40.78	8.16	0.60	0.33	0.76
500	49.06	9.81	0.72	0.39	0.91
630	55.36	11.07	0.81	0.44	1.03
800	63.83	12.77	0.93	0.51	1.19
1,000	71.30	14.26	1.04	0.57	1.32
1,250	79.35	15.87	1.16	0.63	1.47
1,600	84.75	16.95	1.24	0.68	1.57
2,000	88.58	17.72	1.30	0.71	1.65
2,500	86.91	17.38	1.27	0.69	1.61
3,150	88.05	17.61	1.29	0.70	1.64
4,000	90.06	18.01	1.32	0.72	1.67
5,000	91.37	18.27	1.34	0.73	1.70
6,300	94.30	18.86	1.38	0.75	1.75
8,000	94.20	18.84	1.38	0.75	1.75
10,000	95.17	19.03	1.39	0.76	1.77
12,500	97.88	19.58	1.43	0.78	1.82
Apparent NRC:			0.85	0.50	1.10
Apparent SAA:			0.87	0.48	1.11

Prepared by 
Malcolm Kelly
Acoustical Test Engineer